

# 2015-2017 Ford Powerstroke EZ LYNK SOTF Switch

## INSTALLATION GUIDE

1 With the Brown & Orange wires pulled through the fire wall into the engine bay, take the supplied male plug and push the wires into the correct locations as seen below.

- a. Remove the Brown rubber grommet from the Black male plug



- b. Insert both the Orange and Brown wires through the Brown rubber grommet




- c. Push the pins into the correct locations (they will lock into place)



- d. Slide the rubber grommet into place and insert all 3 of the plastic Green pins



2 Locate the Fuel Temperature Sensor under the hood of the truck on the drivers side of the motor (see image)

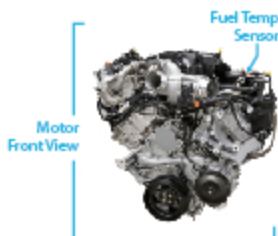

3 Disconnect the Fuel Temperature Sensor and plug your new EZ LYNK SOTF Switch Plug into the Disconnected sensor.

4 Mount your SOTF Switch in your desired location of preference to finish the installation.


## TROUBLESHOOTING

1 Make sure the switch is installed in the correct PIN locations.

2 Make sure the switch only clicks 4 times.  
Do the following if the switch clicks more than 4 times:

- Remove 13mm nut, washer, and silver tab washer
- Turn the knob all the way to the left and proceed to step 3

3 Make sure that the silver tabbed washer is in between the #5 and #6 locations on the SOTF switch.

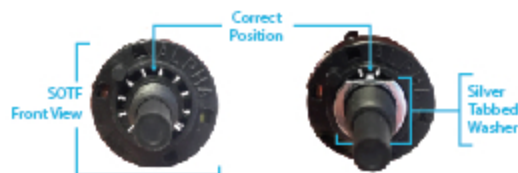

4 When installed correctly you can test the switch to make sure its sending the correct signal to the truck and change the tunes accordingly. Looking at the back side of the switch it will have a button and a LED light. 2

- Tune 1 = Brightest LED Flash
- Tune 2 = Normal Brightness LED Flash
- Tune 3 = Dim LED Flash
- Tune 4 = Very Dim LED Flash
- Tune 5 = No LED Flash

