


7th Gen Instructions

PRODUCT SPECIFICATION


Input Power	L/25W, H/25W
Operating Voltage	12-24V
Luminous Flux	L/4000LM, H/4000LM
IP Rate	IP65
Light Source Model	ZES Chip
Color Temperature	6500K
Heat Dissipation Theory	Aviation aluminum 6063
Operating Life	>30000hrs
Operating Temperature	-40°C ~ +80°C

Chuck Adjustment Instructions

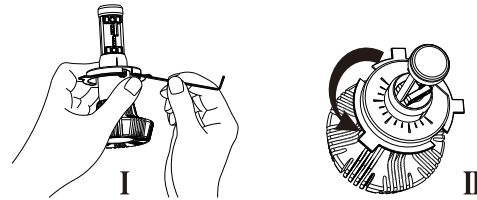

1. Insert L tool into the chuck adjustment slot, as indicated on the diagram, and rotate counter clockwise to loosen the chuck.
2. Rotate the chuck to adjust the light beam.
3. Repeat step one but rotate clockwise to secure the chuck.
4. Line up the chuck with the sockets, and insert then rotate to secure the LED bulb into the headlight housing.

Base Adjustment Instructions

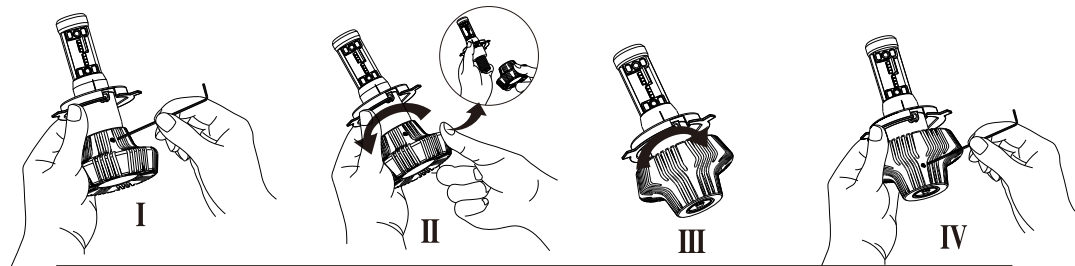


Note: For vehicles equipped with headlight dust covers, caps, or have limited housing space, please read the following instructions on adjusting your LED headlights heat sink base.

1. Insert L tool into the base adjustment slot, as indicated on the diagram, and rotate counter clockwise to loosen the heat sink base.
2. Remove the heat sink base by rotating counter clockwise.
3. Flip the heat sink and reinstall to the LED bulb by rotating clockwise.
4. Insert L tool into the base adjustment slot and tighten up the screw to secure the base.

Front


Size: 195x145mm

H4/H7/H13/H16EU/9004/9007/PSX24/PSX26

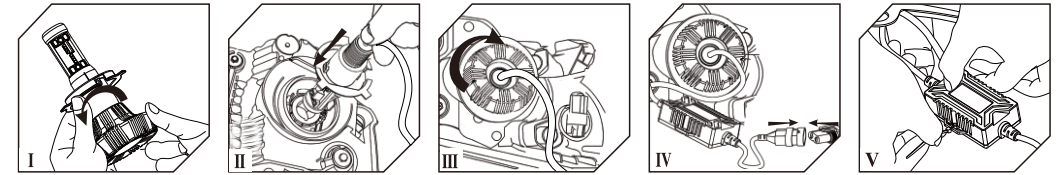

1. Unscrew and take off the heatsink base
2. Put the LED bulb body into the headlight housing and make sure it is in the correct position
3. Lock the bulb and screw the heatsink base back to the LED bulb body
4. Connect the wire to the driver unit and the original headlight adapter
5. Secure the driver on the metal surface of the car with 3M sticker or straps

H8/H9/H10/H11/H16JP/9005/9006/P13

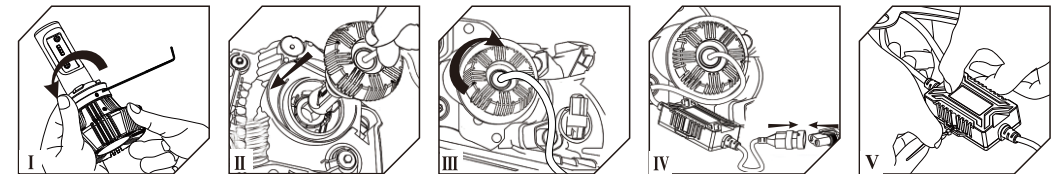

1. Adjust collar position for correct light angle
2. Put the LED bulb body into the headlight housing and make sure it is in the correct position
3. Lock the bulb and screw the heatsink base back to the LED bulb body
4. Connect the wire to the driver unit and the original headlight adapter
5. Secure the driver on the metal surface of the car with 3M sticker or straps

After-sale Service

Purchase Date	(Year)	(Month)	(Date)
Warranty Period	(12months)		
Purchase Store			

Please paste the store's stamp and guarantee barcode here. Please notice the purchase date should be confirmed when you buy the product.

Back