



THE RETROFIT SOURCE
The Best Brands in Automotive Lighting

support@theretrofitsource.com
404.220.7940

INSTALLATION GUIDE:

MORIMOTO XB LED FOG LIGHTS






WARNING: By reading this document, I agree it is only to be used as an educational guide. The Retrofit Source makes no guarantee on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. Use at your own risk. If you are unable to clearly understand and adapt the information below to your own application, professional installation is recommended.

CONNECTOR IDENTIFICATION

Your Morimoto XB LED fog lights will come with one of the following connector types:


H11 / H9 / H8
Male



9005 / 9006 /
H10 Male



5202 / PSX24W
Male

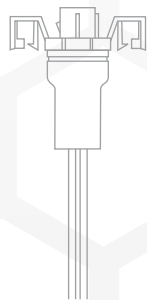

A NOTE ABOUT WIRING

For the H11 / H9 / H8 Male and 9005 / 9006 / H10 Male connectors, they do not come pre-installed in the plastic connector housing because the fog light wiring polarity varies with these types.

Test the bare pins in the stock fog light connector to ensure the light works first, then insert the pins into the plastic connector housing in the same orientation to complete the wiring of your new fog lamps.


OPTIONAL LAMIN-X FILM INSTALLATION

1




Gently remove the backing paper from the Lamin-X film and spray the sticky side of the film with a light mist of water.

2

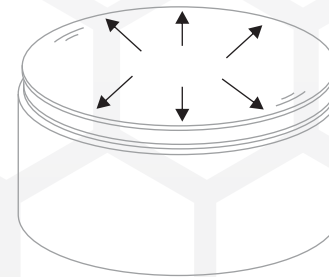

Holding only the very edges of the film, center it up on the fog light and press gently in the center to secure it. Use your thumbs and press outward to smooth out the film and secure it on the fog lamp.

3

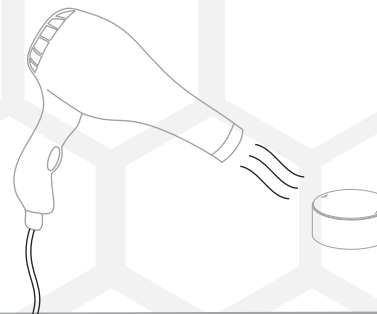

If necessary, use a blow dryer to heat the Lamin-X up slightly and press any lifting areas as needed.

-END-