


818

**04-07 DODGE RAM 2500/3500 5.9L HO600
4" MUFFLER BACK SINGLE SYSTEM**

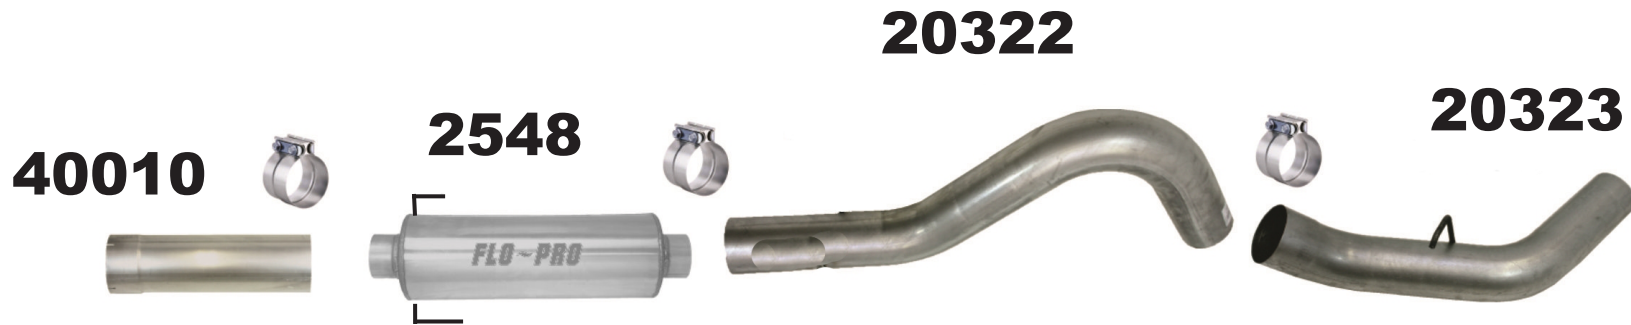

- 1-40010(1-1)
- 1-2548
- 1-20322(3-5)
- 1-20323(3-6)
- 4-LJ400

FLO~PRO
PERFORMANCE EXHAUST

PICKED BY: _____



**WARNING: BEFORE YOUR BEGIN, VERIFY
THAT YOU RECEIVED THE RIGHT KIT &
EACH PART LISTED ON THE REVERSE PAGE**



**KIT #818
04-07 DODGE RAM 2500/3500 5.9L HO600
4" MUFFLER BACK SINGLE SYSTEM**

Warning:

Allow the trucks exhaust system to cool before removal. Always practice safe work habits, i.e. jack stands, gloves, safety glasses etc.

Notes:

FLO~PRO Performance Exhaust Systems are designed to fit stock trucks with OEM hitches, tires, wheels, and spare sizes. Any suspension lifts or other variations may require modification of the new exhaust system for proper fit and finish.

*Place clamps on connections before installing pipes. **Do not** tighten clamps until the complete system is in place. Snug clamp down so it will hold the pipe but pipe can still be moved.*

WD40 or equal will make removal of hangers easier. Do not tighten clamps until installation is complete.

A small tack with a mig welder is recommended on all clamp connections.

1. Loosen all clamps from the front of muffler to tail pipe. Remove the metal hangers from OE rubber hangers. Remove the OE system from truck.
2. Install extension pipe as needed depending on wheel base. Next install muffler by placing metal hangers on muffler, into the OE rubber hangers. Place the over axle pipe into the outlet of muffler. Install tail pipe assembly onto the over axle pipe. Install metal hanger into OE rubber hanger, place clamps on all connections.
3. With the muffler and pipes mounted loosely, adjust the new Flo-Pro system for clearance and appearance. Evenly tighten all clamps starting with the front clamp working your way to the back.

www.flopro.com

Technical Support: 1 800 762 4286 or email, techsupport@flopro.com