

## Installation Steps:

1. Remove the two rear screws in the bottom of the factory console (**image 1**)
2. Insert the safe into the factory center console
3. Remove adhesive tape liner on trim ring
4. Install trim ring on top of the safe. The four screws on the trim ring are for proper alignment.
5. Install two mounting screws (provided) into the rear holes in the bottom of the safe. This will secure the safe into the factory console.
6. Replace rubber pad into the base of the safe.




### Model# 1011B


### USB Access

### Installation Instructions


*Starting with the 2009 model year GM offered an optional (not standard option) USB Port, located in the right rear portion of the factory console (**Image 2**). With the 2010-2013 model year trucks this became a standard option. We modified the trim ring to accommodate a USB port extender cable.*

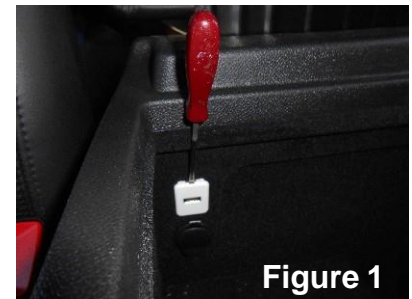

**Figure 1**

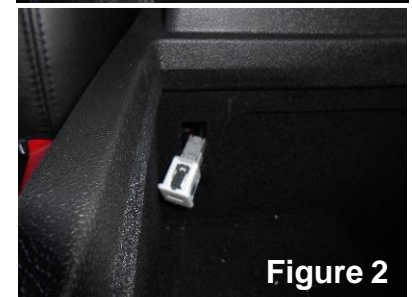

**Figure 2**

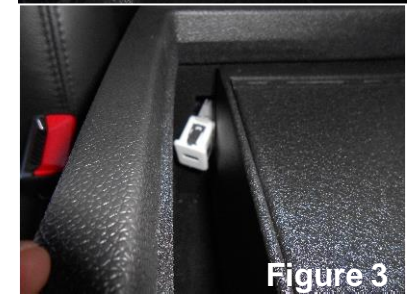

**Figure 3**



**Figure 4**

- 1) Looking at the USB port bezel (plastic holder), notice that there are two notches, one at the top and one at bottom of the bezel. Using a small flat blade screwdriver insert the screwdriver into the top notch to depress the "spring latch" (**see figure 1**) while depressing the spring latch, gently pull-out the top portion of the bezel. Now repeat on the bottom notch and completely remove the bezel from its holder, see **figure 2** (**DO NOT UNPLUG THE WIRES**).
- 2) Next install the Console Vault as instructed. Once the vault is install the USB port will be positioned between the vault and the factory console. (**see figure 3**)
- 3) Next take the trim ring with the USB extender cable attached and plug it into the factory USB port. Gently tuck the cable between the vault and factory console, (**see figure 4**) and tape down into place.

# Combination Lock Reset Guides:

## Installation Steps:

**IMPORTANT:** Make sure to set your combination **BEFORE** installing your safe

Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout



⇒ [4 Digit Lock User Guide](#)



⇒ [3 Digit Lock User Guide](#)



⇒ [Elite 4-Digit Lock  
User Guide](#)