



Installation Steps:

ATTENTION: Review all steps prior to initiating installation. If you purchased a safe with a combination lock, please follow the combination lock reset instructions BEFORE BEGINNING INSTALLATION to prevent accidental lockout:

4-DIGIT COMBINATION LOCK GUIDE

3-DIGIT COMBINATION LOCK GUIDE

ELITE 4-DIGIT COMBO LOCK GUIDE

1. Remove all contents from the center console, including pad at the bottom. Notice that the unit has a pivot point towards the back, push back of unit all the way in towards the front. (Fig. 1)
2. Open the lid of your Console Vault and place the front of your unit into the factory console (see fig. 2). The back of the unit will fall into place, once the unit is fully down in place, reach into the Console Vault and slide the back portion of the Console Vault into its correct position (see fig. 3).
3. Take the 1.25" self cutting screws provided with the kit and thread them into each of the fittings on each side of the unit (see fig. 3). Only "finger tighten" them down at this time.
4. Using a 10mm socket start to turn and tighten the screws, start with the driver's side. These screws are designed to cut their own hole while turning. We will need to alternate tightening each screw, give driver's side screw a couple of turns and then repeat for the passenger side. Continue alternating on each screw until they are completely tightened down.
PLEASE NOTE: While tightening these screws the plastic of the factory console may want to push away and create a gap between the Console Vault and the factory console (see fig. 4). If this happens simply back-out both screws completely and repeat the previous step. Also, you can apply inward pressure with your free hand on the outside of the factory console opposite the screw (see fig. 5)
5. Next put carpet liner in the bottom of unit and installation is complete

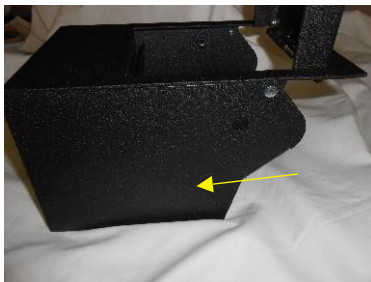


Figure 1



Figure 2



Figure 3



Figure 4



Figure 5