



Installation Steps:

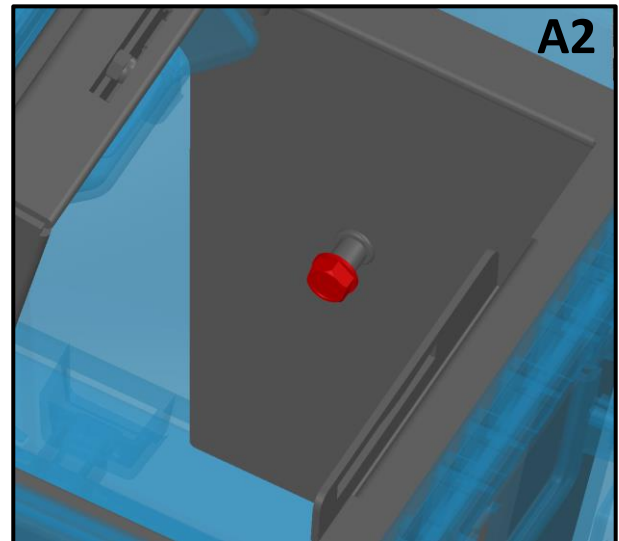

1. Reset the combination lock before beginning the installation.
2. Remove all the contents from the center console, leaving the console pad at the bottom in place. Console pad is shown in image A1 with the console cut away.
3. Slip the Safe down into the center console, lock should be at the rear of the console.
4. Open lid of the safe and notice two threaded fitting, one on the driver's side and one on the passenger side. Passenger side screw is shown in red in **A2**.
5. Next take the two "Tek-Screws" from the hardware kit and hand thread them into each fitting.
6. Tighten each of the "Tek-Screws" using a socket wrench, **DO NOT OVERTIGHTEN**, these screws are designed to cut their own hole while turning. Once the screw is fully seated, **STOP**. Over tightening will damage the fitting. If you have a torque wrench available tighten to 7Nm (61.95 in-lb).
7. The installation is complete.

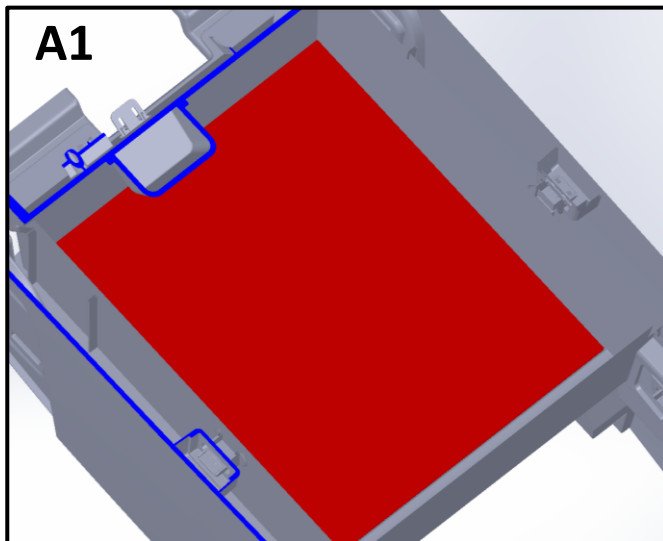

Combination Lock Reset Guides:

Installation Steps:

IMPORTANT: Make sure to set your combination **BEFORE** installing your safe

Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout



⇒ [4 Digit Lock User Guide](#)



⇒ [3 Digit Lock User Guide](#)



⇒ [Elite 4-Digit Lock
User Guide](#)