



CONSOLE VAULT®

INNOVATIVE SECURITY SOLUTIONS

(800) 878-1369 www.consolevault.com


2019+ VW Atlas Instruction Sheet (1102)




Installation Steps:

1. If applicable, reset the combination lock before beginning installation.
2. Remove all contents from the console, including the OEM rubber pad and the two screws located at the front. These screws will not be needed for the installation. After all contents are removed, it should look like image **(A1)**.
3. Insert the safe body into the console, remove the foam pad, insert the 2 screws provided with the packaging and using a 4mm Allen Wrench, tighten the screws. **(A2)**
4. Plug in the USB-A Extension Cable and insert the foam pad back into the safe. **(A3)**
5. The installation is now complete! **(A4)**

A1

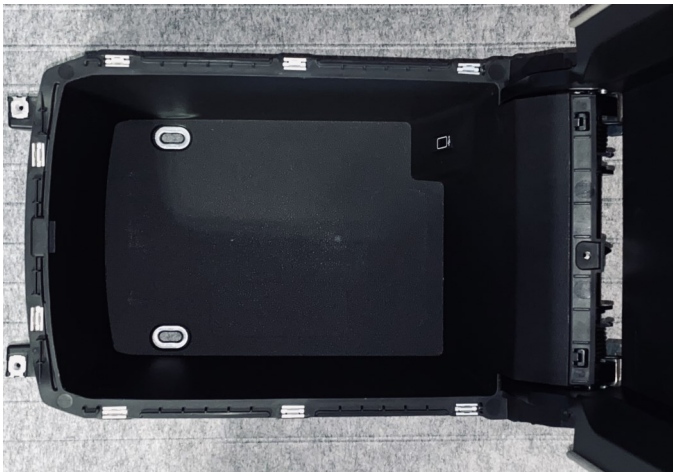

A2

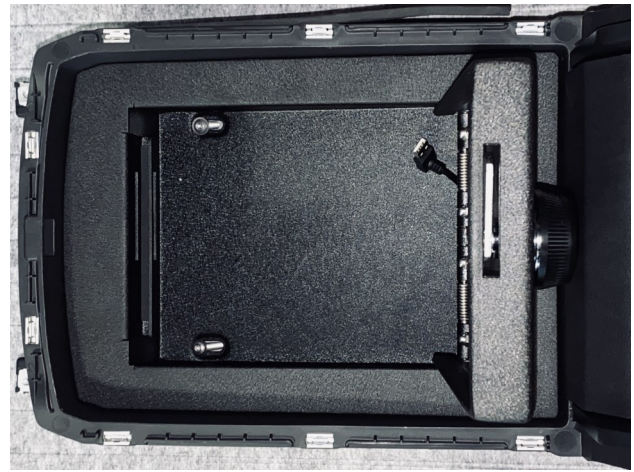

A3



A4

