
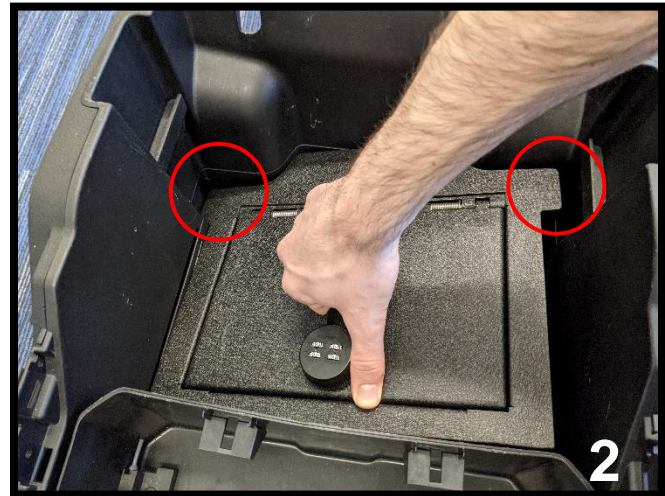


Installation Steps:

- 1) If applicable, reset the combination lock before beginning installation.
- 2) Remove all contents from the center console, except the OEM pad at the bottom.
- 3) Slide the tray all the way forward and swing the flap divider to the up position (1).
- 4) Begin inserting the Console Vault safe such that the back features (**red circles**) fit within the channels (2).
- 5) Tilt the safe down to clear the flanges (**blue circles**) (3) then rotate the back of the safe down until it rests flat.
- 6) Insert the 4 self drilling screws by hand, then using a 7/16" socket wrench, complete tightening until the screw heads fully contact the insert nuts and **STOP!** (4) **Warning! Overtightening the screws will cause damage to the threads.**
- 7) The installation is now complete!

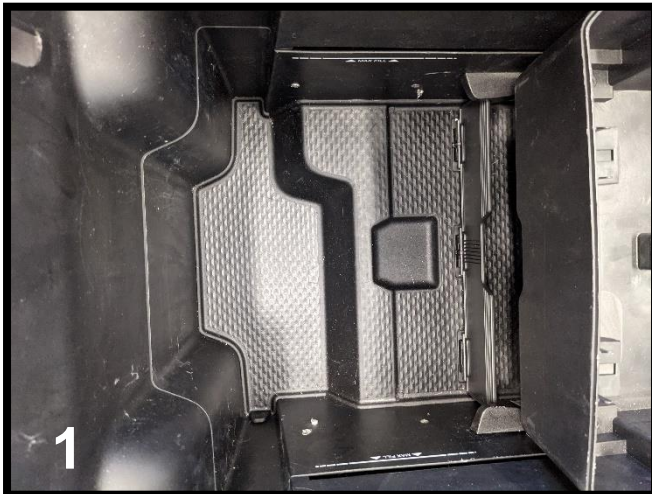

Combination Lock Reset Guides:

Installation Steps:

IMPORTANT: Make sure to set your combination **BEFORE** installing your safe

Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout



⇒ [4 Digit Lock User Guide](#)



⇒ [3 Digit Lock User Guide](#)



⇒ [Elite 4-Digit Lock
User Guide](#)