



CONSOLE VAULT®

INNOVATIVE SECURITY SOLUTIONS

(800) 878-1369

www.consolevault.com

2014+ — Toyota Tundra Half-Safe Instruction Sheet (1090)




Installation Steps:

- 1) If applicable, reset the combination lock before beginning installation.
- 2) Remove all contents from the center console, including the OE felt liner on the bottom.
- 3) Remove and discard (2) 10mm Hex Bolts located inside the console on the passenger side of the vehicle.
- 4) Apply masking tape to passenger side half of the console. Apply tape approx. 1/2" down from top of console rim to protect the console from damage during installation.
- 5) Insert Tundra Half-Safe into the passenger side half of the console by angling the safe around the armrest hinge. Once the top of the safe is clear of the armrest hinge, straighten out the safe and push to the passenger side wall of the console bin.
Note: If there is not sufficient clearance, follow steps 6 and 7 to temporarily remove the armrest.
- 6) Verify console armrest is closed. From the back seat, remove rear plastic console trim by gently separating the trim from the main console body. **NOTE: A Nylon Panel Removal Tool or flat-head screwdriver is recommended.**
- 7) Open console armrest. Remove all (8) 8mm Hex Screws holding the armrest onto the console. Once removed insert the safe on the passenger side of the console bin illustrated in **Step 5**.
- 8) Select (1) Short Hex Bolt and insert bolt into the front hole and hand tighten. Select (1) Long Hex Bolt and insert bolt into the rear hole and hand tighten. Remove the masking tape from **Step 4**.
- 9) Using a 10mm socket, tighten down the (2) Hex Bolts.
- 10) Place the (2) felt pads in the bottom of the console and safe. The installation is now complete!


Step 2



Step 3

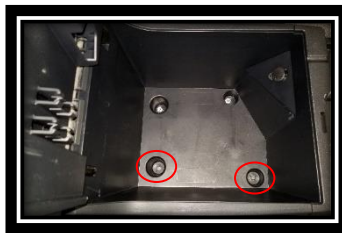

Step 4

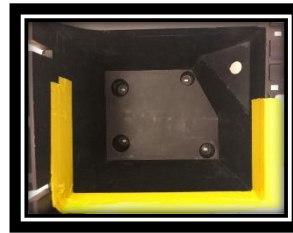


Step 5




Step 6



Step 7

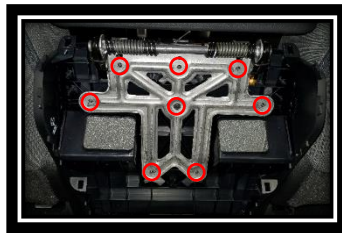

Step 9

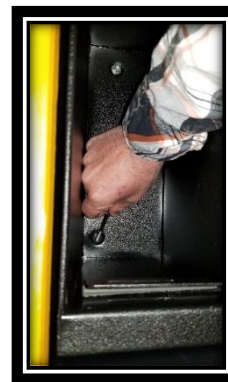

Step 10

