

Model# 1044
2011-2018 Jeep Wrangler
Installation Instructions



- 1) **Reset our combination now (if you ordered the combo lock option), before you start the installation.** Remove all contents from your factory console, including the factory rubber pad/liner in the base of the factory console.
- 2) In order to give the necessary clearance needed to accommodate the lock, the inner lid (see fig. 1) of the factory console needs to be removed. From the back seat notice there is a panel covering the entire back portion of the factory console. Place one hand on one side of this panel, just behind the seam and your other hand on the opposite side, again just behind the seam and gently pull back (this panel will easily pop out of its place). Do not disconnect any wires and just leave this panel hang in place (see fig. 2). Next from the front seat, looking at the top back portion of the factory console notice the plastic piece covering the hinge point of the lid. From either side place a finger under the outside edge and gently pull up (see fig. 3A & 3B). Now Locate the two hinge points for the inner lid, from either side gently pry outwards pulling towards the outside of the vehicle (see fig. 4), be careful to only pry far enough to clear the hinge pin. Once one side is out the other will side right out. After the inner lid is removed replace these panels.
- 3) Next take the Console Vault and slide it down into the factory console. Make sure the vault is all the way down in the console. Next with the lid of the vault closed, make sure your lid of the factory console shuts completely. Now notice the three (two in the back of the vault and one in the front) threaded fittings, take the three self cutting screws provided with your vault and finger tighten these into those threaded fittings(see fig. 5). Now using a 3/8" socket start turning the screws, its best to alternate between each screw. Give the back screw a couple of turns then repeat on the front screw then the other rear screw. Keep turning them until they are fully in place. These screws are designed to cut their own holes. The installation is complete, place the felt liner in the base.



Figure 1



Figure 2



Figure 3A

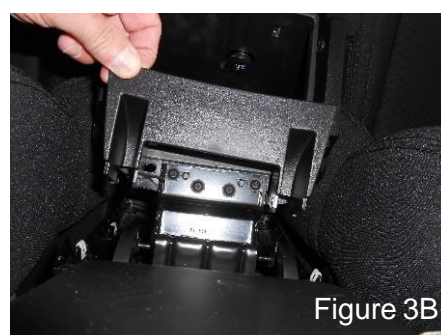


Figure 3B

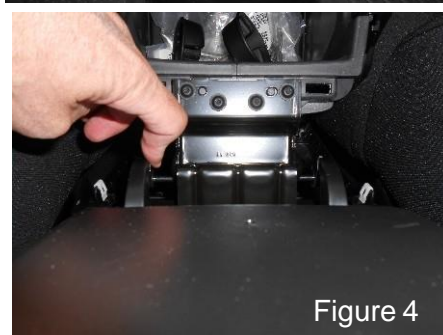


Figure 4

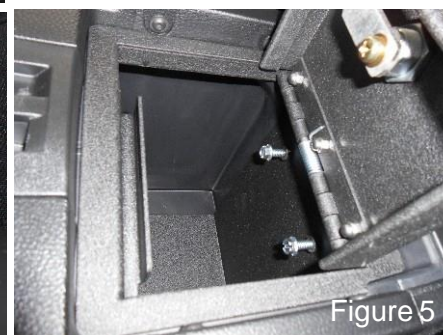


Figure 5