

## Installation Steps:

**ATTENTION:** Review all steps prior to initiating installation. If you purchased a safe with a combination lock, please follow the combination lock reset instructions BEFORE BEGINNING INSTALLATION to prevent accidental lockout:


**4-DIGIT COMBINATION LOCK GUIDE**

**3-DIGIT COMBINATION LOCK GUIDE**

**ELITE 4-DIGIT COMBO LOCK GUIDE**

1. Remove all contents from the center console, including tray and pad at the bottom.
2. Slip In-Vehicle Safe down into the center console. Note: The lock should be at the front of the console. **(A1)**
3. Open the lid of the safe and locate the (4) threaded fittings inside the safe, two on the driver side and two on the passenger side. Hand thread the (4) self-drilling screws into each fitting.
4. Tighten each of the (4) self-drilling screws until the screw head fully rests against the insert nut and STOP! DO NOT OVER TIGHTEN - Over tightening will damage the fitting. Using a socket wrench, tighten each of the hex-head screws. DO NOT OVER TIGHTEN. **(A2)**
5. Place the provided pad in the bottom of the In-Vehicle Safe, installation is complete.

**A1**

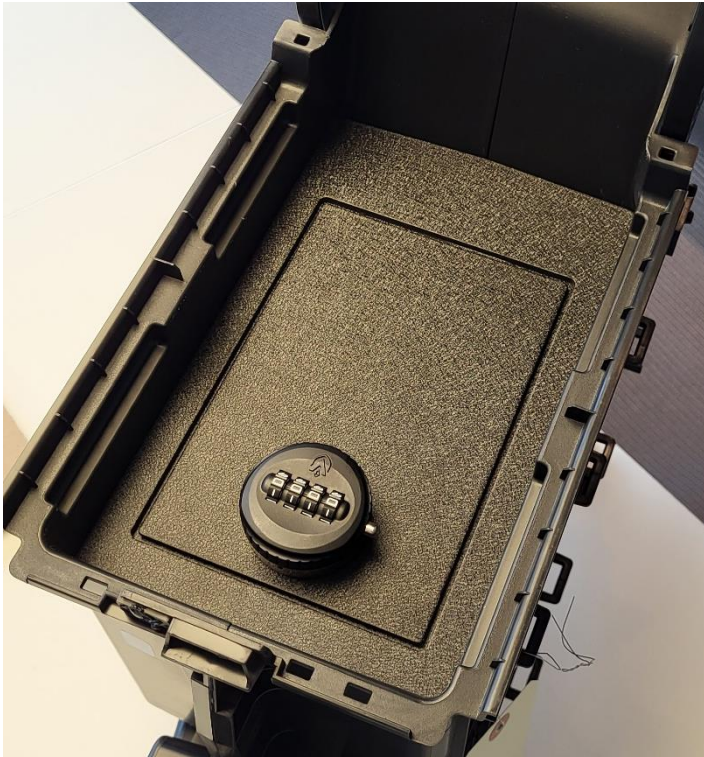

**A2**

