


Installation Steps:

1. **ATTENTION!** Review all steps before initiating installation.
2. If applicable, reset the combination lock before beginning installation.
3. Remove all contents from the center console, only leaving the **OE** pad at the bottom.
4. With the door in the open position, carefully lower the safe into the console in the correct orientation with the lock positioned at the front.
5. At the front bottom left of the safe, locate the **two pre-drilled holes**. Insert the **2 Self Drilling Screws** by hand through those holes and use a **1/2" Socket Wrench** to completely tighten the screws in place. **STOP!** Overtightening the screws will cause damage to the threads.
6. If a foam pad was provided with your safe, insert into the safe positioned for best fit.
7. The installation is now complete.

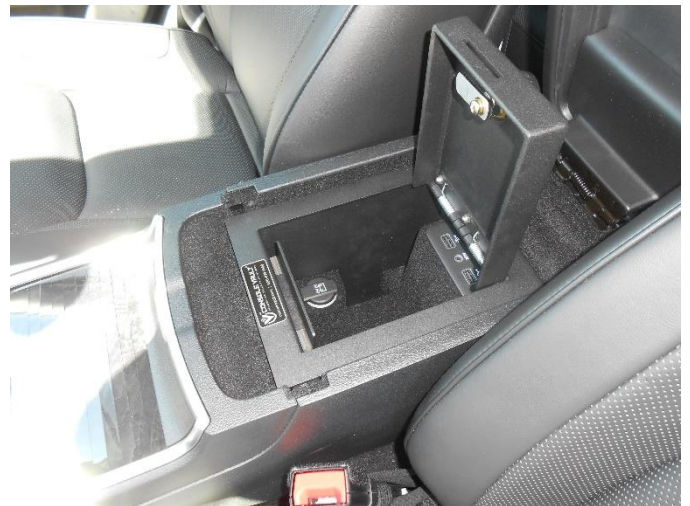

After Install



After Install