

## Installation Steps:

### Tools Needed:

- Torque Wrench
- 7/16" Socket

## Installation Steps:

- 1) Review all steps before initiating installation.
- 2) If applicable, reset the combination lock before beginning installation.
- 3) Open the center console. Remove all contents, including the liner at the bottom of the console.
- 4) Collapse and guide the hinge plate into the console such that the "FRONT" sticker is closer to the front of the vehicle (**A1**).
- 5) Unfold the hinge plate so the front sticker is on the floor and open the hinge plate arms (**A2**).
- 6) Insert the two studs on the underside of the top frame into the slots (Studs and direction indicated with green arrows in **A3**), pull this side of the safe out against the console wall. While continuing to hold the top frame, position the studs on the opposite side with the corresponding slots and drop the top frame into position (**A3**).



**INSTRUCTIONS CONTINUE  
ON PAGE 2**

## Installation Steps:

### Installation Steps Continued:


7) Thread the four nuts onto the studs on the underside of the top frame by hand (**A4**).

8) Using a 7/16" socket, fasten the four nuts to 7Nm [61.95 in-lb]. (**A5**)

9) Insert the four screws into each threaded insert. Then using a 7/16" Socket tighten each screw to 7Nm [61.95 in-lb].

10) Insert the pad into safe using the curved features as a reference (**A6, BLUE OVALS**).

11) The installation is now complete.

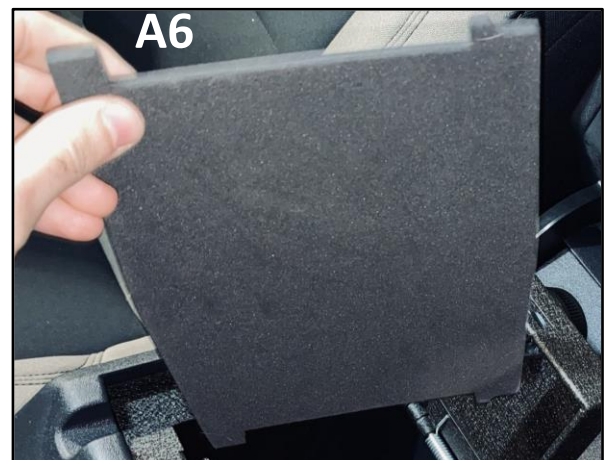

# Combination Lock Reset Guides:

## Installation Steps:

**IMPORTANT:** Make sure to set your combination **BEFORE** installing your safe

Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout



⇒ [4 Digit Lock User Guide](#)



⇒ [3 Digit Lock User Guide](#)



⇒ [Elite 4-Digit Lock  
User Guide](#)