

Installation Steps:


1. If applicable, reset the combination lock before beginning installation.
2. Remove all contents from the center console, including OEM console tray, and open the door on the Console Vault safe.
3. Put a metal washer on each of the hex screws and insert them both into the cavities at the bottom of the safe (3).
4. Put a spacer on each of the screws that are protruding through the bottom of the safe and hold them in place by pushing a plastic retaining washer on each of them. Screw the plastic retaining washers down to secure them in place (4).
5. Using two hands gently slide the safe into the console. As the safe contacts the bottom of the console, maneuver it until both screws align and drop into their respective slots (5).
6. Hand start both hex screws into the threads beneath the slots, then tighten them with a 10mm socket wrench until they come to a hard stop (6).
7. Insert pad into in-vehicle safe (7).
8. The installation is now complete!



Step 3



Step 4

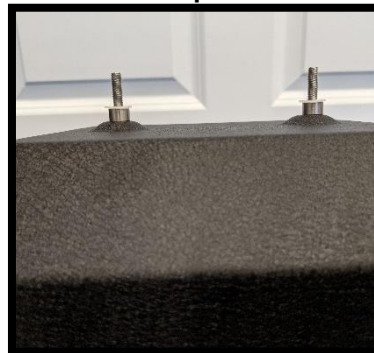

Step 5



Step 6



Step 7



Combination Lock Reset Guides:

Installation Steps:

IMPORTANT: Make sure to set your combination **BEFORE** installing your safe

Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout



⇒ [4 Digit Lock User Guide](#)



⇒ [3 Digit Lock User Guide](#)



⇒ [Elite 4-Digit Lock
User Guide](#)