



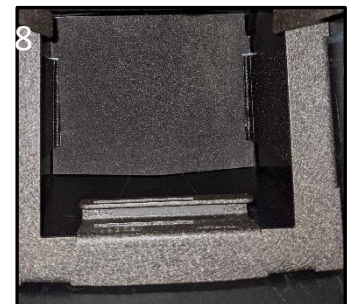

## Installation Steps:

- 1) Remove any contents from the center console and set the lock combination according to lock instructions.
- 2) Place the safe top in the center console angled as shown. **A1**
- 3) Grabbing the finger pull attached to the 4-digit lock, rotate the safe to horizontal while simultaneously lifting (**A2 - A3**) so that the safe comes to rest on the front and back walls of the center console. **A4**
- 4) Open the safe and lower the hinged plate inside so the "FRONT" sticker is oriented towards the engine. **A5**
- 5) Open the hinged plate and use a 1/2" socket to fasten all 4 nuts to **7Nm** [61.95 in-lb]. **A6**
- 6) Notice four threaded fittings, two in the front, two in the back. Hand thread a screw into each fitting.
- 7) Insert the four screws into each threaded insert. Then using a 7/16" Socket tighten each screw to **7Nm** [61.95 in-lb]. **A7**
- 8) Place the foam pad into the center console. **A8**
- 9) The installation is now complete.

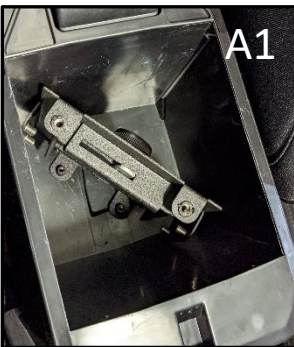

# Combination Lock Reset Guides:

## Installation Steps:

**IMPORTANT:** Make sure to set your combination **BEFORE** installing your safe

Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout



⇒ [4 Digit Lock User Guide](#)



⇒ [3 Digit Lock User Guide](#)



⇒ [Elite 4-Digit Lock  
User Guide](#)