

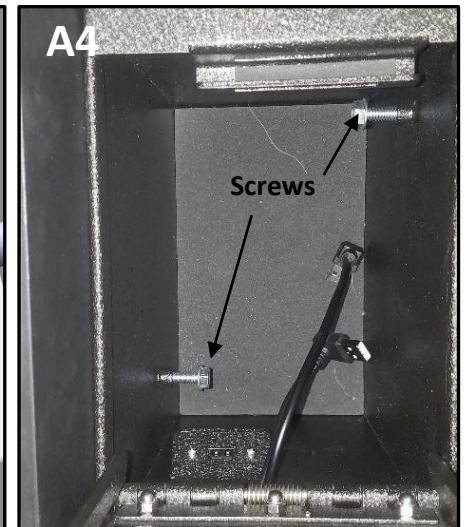


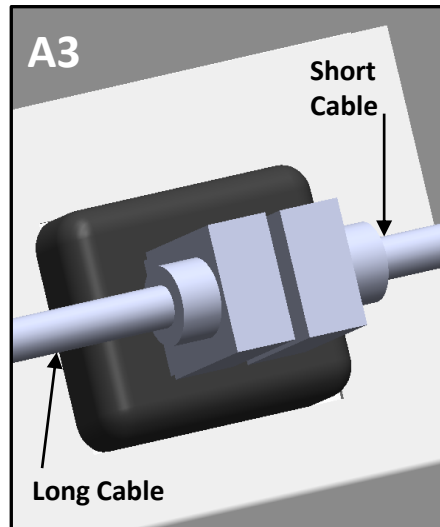

Installation Steps:

- 1) Remove any contents from the center console.
- 2) Ensure both USB cables are pulled inside the safe and are not pinched during installation. **A2**
- 3) Orient the safe so that the lock is towards the rear of the vehicle. Place the safe inside the center console. **A1**
- 4) Pull gently on both USB cables to ensure they are not pinched between the safe and console. **A2**
- 5) Plug the USB cables into the console in the orientation shown from driver perspective. **A3**
- 6) Notice two threaded fittings, one on each side of the safe. Hand thread the self-drilling screws into each fitting. **A4**
- 7) Tighten each of the self-drilling screws until the screw head rests against the insert nut and **STOP!**, **DO NOT OVER TIGHTEN**. Over tightening will damage the fitting. **A4**
- 8) Place the provided foam pad in the bottom of the safe.
- 9) The installation is now complete.

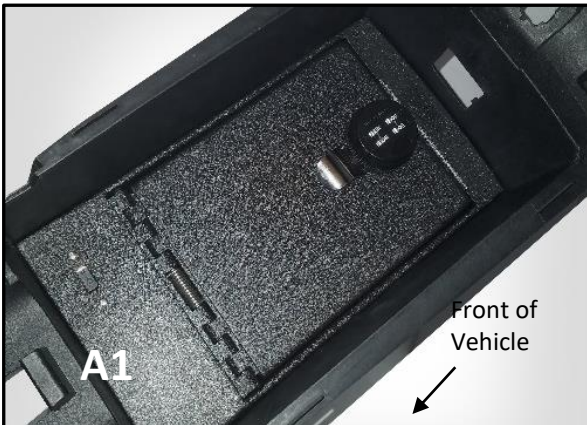

Combination Lock Reset Guides:

Installation Steps:

IMPORTANT: Make sure to set your combination **BEFORE** installing your safe

Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout



⇒ [4 Digit Lock User Guide](#)



⇒ [3 Digit Lock User Guide](#)



⇒ [Elite 4-Digit Lock
User Guide](#)