


Installation Steps:

1. If applicable, reset the combination lock before beginning installation.
2. Remove all contents from the center console.
3. Leave pad at the bottom of the safe and gently slide it into the console (1).
4. Insert both self drilling screws by hand, then using a 7/16" socket wrench, complete tightening until the screw heads fully contact the insert nuts and **STOP! (2) Warning!**
Overtightening the screws will cause damage to the threads.
5. The installation is now complete!

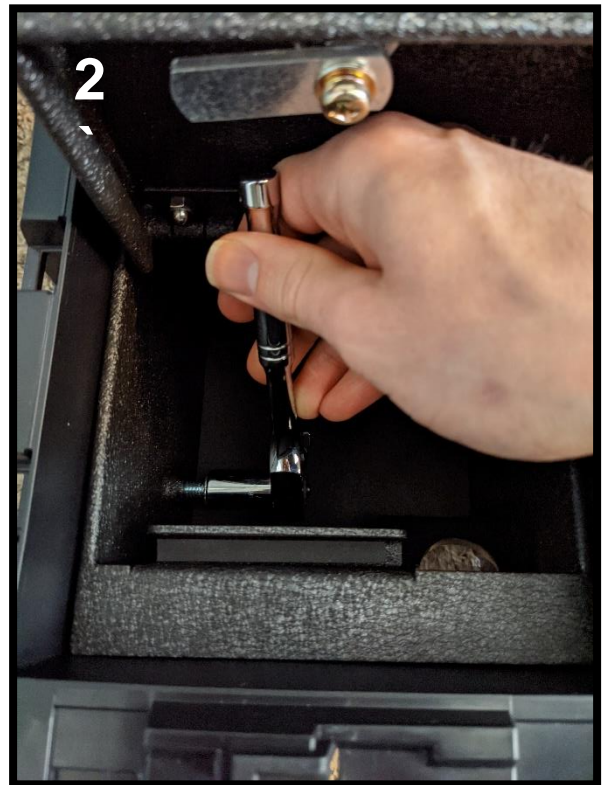

Combination Lock Reset Guides:

Installation Steps:

IMPORTANT: Make sure to set your combination **BEFORE** installing your safe

Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout



⇒ [4 Digit Lock User Guide](#)



⇒ [3 Digit Lock User Guide](#)



⇒ [Elite 4-Digit Lock
User Guide](#)