


Installation Steps:

- 1) Review all steps before initiating installation.
- 2) If applicable, reset the combination lock before beginning installation.
- 3) Remove all contents from the center console.
- 4) For install, the safe should be oriented such that the lock is towards the rear of the vehicle. Carefully slide in the safe body into the console (**Image 4-A**); you may do this with the safe door open if needed. Be sure that the vault is seated all the way down into the console compartment. (**Image 4-B**)
- 5) Hand start the (3X) self-drilling screws (**Image 5**), 2X at the back of the safe and 1X at the front of the safe, then tighten with a **7/16" socket wrench** until they come to a hard stop. **Warning! Overtightening screws will cause damage to threads.**
- 6) Place the provided mat inside the safe.
- 7) The installation is now complete!

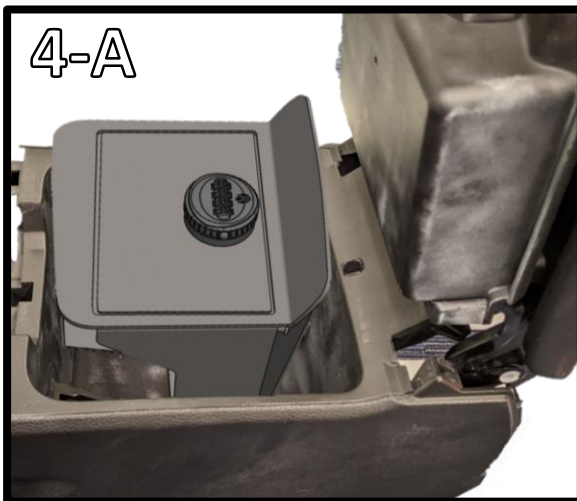

Combination Lock Reset Guides:

Installation Steps:

IMPORTANT: Make sure to set your combination **BEFORE** installing your safe

Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout



⇒ [4 Digit Lock User Guide](#)



⇒ [3 Digit Lock User Guide](#)



⇒ [Elite 4-Digit Lock
User Guide](#)