
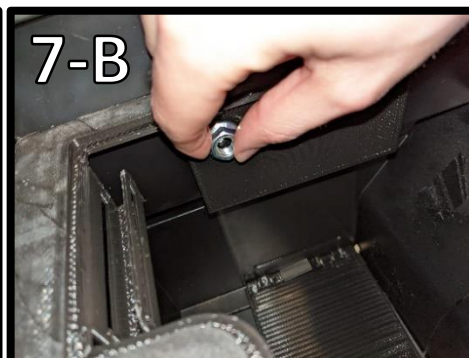
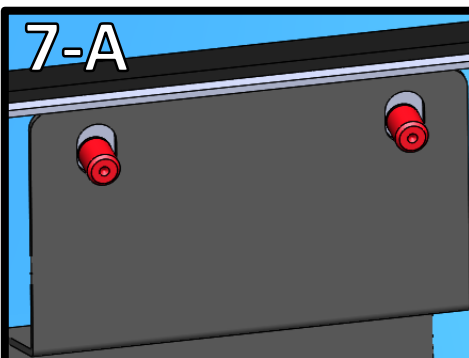
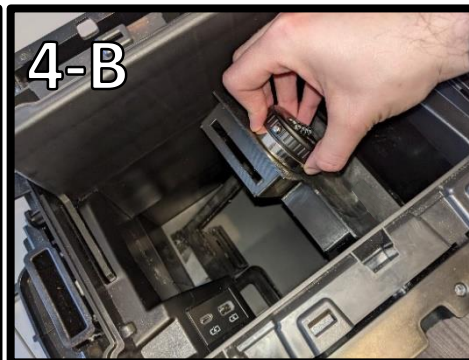


Installation Steps:

- 1) Review all steps before initiating installation.
- 2) If applicable, reset the combination lock before beginning installation.
- 3) Remove all contents from the center console, including the OE pad from the bottom of the console.
- 4) With the door closed, lower the safe frame in the console (front end first) (**Image 4-A**). Carefully open the lid inside of the console (**NOTE: the door will spring open quickly, so open with care!**) (**Image 4-B**)
- 5) Place the hinged plate through the open door in the bottom of the console as shown in **Image 5**.
- 6) Lift the safe frame and bring it to a level position inside the console.
- 7) While holding the safe frame (you can hold it by the frame or the door), unfold the hinged plate and place the holes over the threaded studs (**Image 7-A**). The frame should be able to rest on the threaded studs. Fasten the 4X nuts to the 2X threaded nuts on the left and the other 2X threaded nuts on the right. **Image 7-B**
- 8) Notice 3X threaded fittings, one in front and two at the rear of the frame. Hand thread a screw into each fitting. **Image 8**
- 9) Tighten each of the self-drilling screws, **DO NOT OVER TIGHTEN**, these screws are designed to cut into the bin while turning. Once the screw is fully seated, **STOP**. Over tightening will damage the fitting.
- 10) Place the foam pad provided with your safe into the center console.
- 11) The installation is now complete!

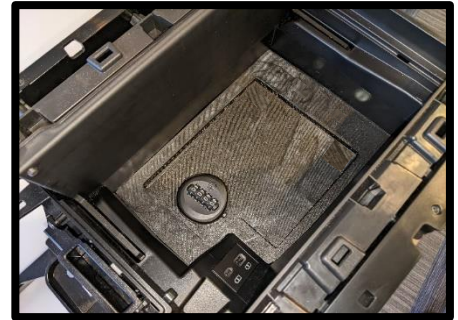

Combination Lock Reset Guides:

Installation Steps:

IMPORTANT: Make sure to set your combination **BEFORE** installing your safe

Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout



⇒ [4 Digit Lock User Guide](#)



⇒ [3 Digit Lock User Guide](#)



⇒ [Elite 4-Digit Lock
User Guide](#)