
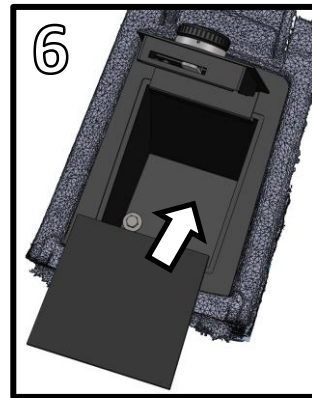
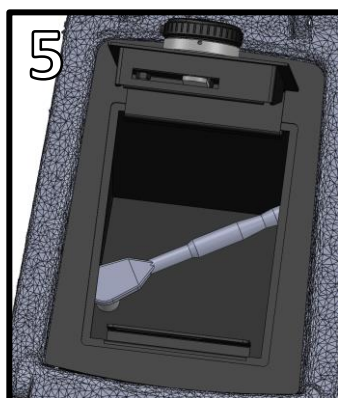
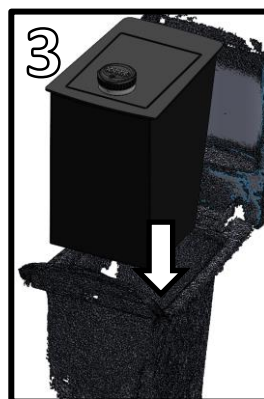


Installation Steps:

- 1) Attention! Please read ALL of the installation steps prior to assembly. If applicable, reset the combination lock before beginning installation.
- 2) Remove all of the contents from your console (mat included if applicable).
(Image 1)
- 3) Using a **10mm socket wrench**, remove the two screws at the bottom of the console. **(Image 2)**.
- 4) The safe will drop directly into the console. Make sure it is oriented correctly with the shape of the console.
(Image 3).
- 5) Locate the kit with **2 replacement screws** and **2 washers**. Put a **washer** on each of the **replacement screws**. Put each of the **replacement screws**, with a **washer**, through the holes at the bottom of the safe. **(Image 4)**
Hand thread each of the **replacement screws** into the fittings of the console. **(Image 4)**
- 6) Using a **10mm socket wrench**, completely tighten **replacement screws** with **washers** until they fully contact the safe and **STOP! DO NOT OVER TIGHTEN** - Over tightening will damage the threads.
(Image 5).
- 7) Place the EVA Foam Pad into the bottom of the safe **(Image 6)**.
- 8) The installation is now complete!

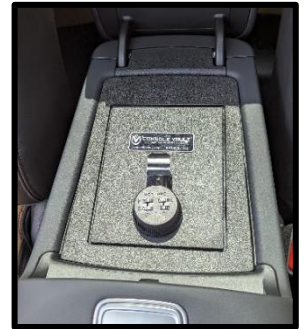

Combination Lock Reset Guides:

Installation Steps:

IMPORTANT: Make sure to set your combination **BEFORE** installing your safe

Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout



⇒ [4 Digit Lock User Guide](#)



⇒ [3 Digit Lock User Guide](#)



⇒ [Elite 4-Digit Lock
User Guide](#)