


Installation Steps:

1. If applicable, reset the combination lock before beginning installation.
2. Remove all contents from the center console.
3. With the safe door in the open position and the hinge towards the rear of the vehicle, carefully lower the safe into the console.
4. The following process drills out the hole in the console wall and helps guarantee your safe has the tightest fit possible to the console.
 - a) Tighten each self-drilling screw until the screw head nearly rests against the insert nut.
 - b) Unscrew the self-drilling screws most of the way and firmly hold the safe wall and the outside of the console together, indicated by the white arrows below. Continue holding together for Step 4c.
 - c) Once again, tighten each of the self-drilling screws until the screw head fully rests against the insert nut and **STOP! DO NOT OVER TIGHTEN** - Over tightening will damage the fitting. If a torque wrench is available, tighten to 7Nm [62 in-lb], otherwise do not surpass hand-tight.
5. Place the EVA foam pad at the bottom of the safe.
6. The installation is now complete.

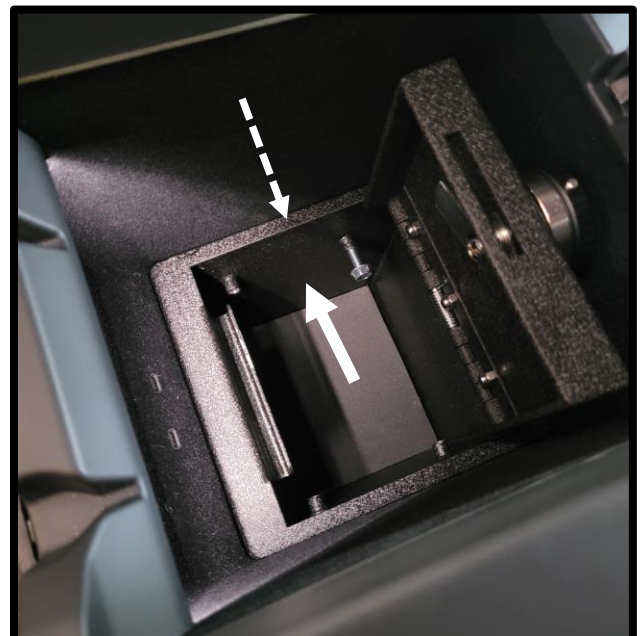

Combination Lock Reset Guides:

Installation Steps:

IMPORTANT: Make sure to set your combination **BEFORE** installing your safe

Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout



⇒ [4 Digit Lock User Guide](#)



⇒ [3 Digit Lock User Guide](#)



⇒ [Elite 4-Digit Lock
User Guide](#)