CONSOLE VAULT®

THE ORIGINAL IN-VEHICLE SAFE

(800) 878-1369 | www.consolevault.com

Ford
Official Licensed Product

Installation Steps:

1. If applicable, reset the combination lock before beginning installation.

2. Remove all contents from the center console, including the rubber pad at the bottom.

3. Insert the **Hinged Plate** at the bottom of the console, closed and lengthwise, as shown. **(A1)**

4. Insert the **Frame Top** at a downward angle, maneuvering until fully inserted and resting at the bottom of the console. **(A2)**

5. With the **Frame Top** resting flat at the bottom of the console, open the lid and pull the **Frame Top** up, so that the front and back contact the ledges in the console indicated by the blue arrows. At that point, the frame top will not be able to go any higher. **(A3)**

6. While holding in this position, open the **Hinge Plate** by pivoting the front and rear sections up, making sure the studs are inserted through the slots. **(A4)** Thread a nut (in red) onto each of the 4 studs, 2 in the front, and 2 in the rear. Using a **1/2" Socket Wrench,** complete tightening.

7. Be sure that the **Frame Top** and **Hinged Plate** are firmly wedged in the console cavity. Insert and thread the 4 Self Drilling Screws (in red) by hand, two on each side. Using a **7/16" Socket Wrench**, complete tightening until the screw heads contact the insert nuts and **STOP! (A5)** _Warning! Overtightening the screws will cause damage to the threads._

8. Insert the provided **Foam Pad**, and the installation is now complete.

A1

A2

A3

A4

A5
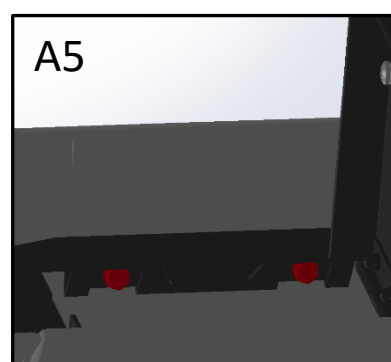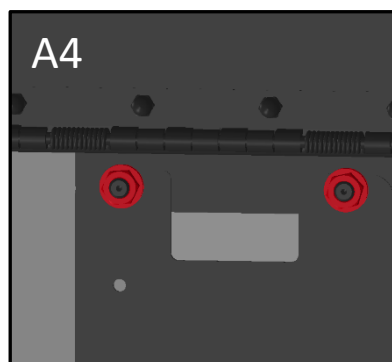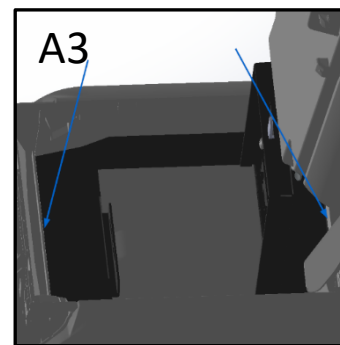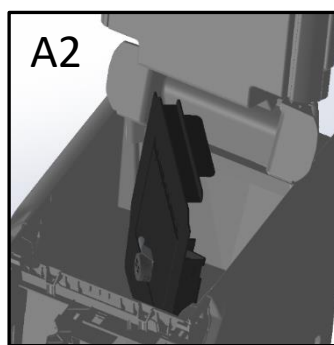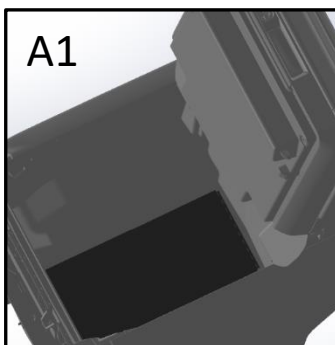
Combination Lock Reset Guides:

Installation Steps:

> **IMPORTANT:** Make sure to set your combination **BEFORE** installing your safe
> Before setting your combination, ensure safe door remains **OPEN** to prevent accidental lockout

⇒ **4 Digit Lock User Guide**

⇒ **3 Digit Lock User Guide**

⇒ **Elite 4-Digit Lock User Guide**