

INSTALLATION INSTRUCTIONS

VEHICLE APPLICATION

Year: **2007.5 - 2009**
 Make: **Dodge Ram**
 Model: **2500/3500/2500-5500 Cab & Chassis**
 Engine: **6.7L Cummins**
 2010 Models: **Classic Body Only**

TOOLS REQUIRED

- 10mm Wrench & Socket
- 1/2" Wrench & Socket
- 7/16" Wrench & Socket
- 5/16" Nut Driver or Flat Blade Screwdriver
- Phillips Screwdriver, Pliers or Channel locks

S&B FILTER MAINTENANCE

- Cleanable (**KF-1035**). If the enclosed filter is Red, it came pre-oiled from the factory. Please visit www.sbfilters.com for exact oil amount required after cleaning.
- Disposable (**KF-1035D**). If the enclosed filter is White, it is a disposable filter and should be discarded once it reaches capacity. This filter (**does not require oil**). For more info on S&B's disposable filter, visit www.sbfilters.com.

NOTES

Kit may not fit with the following Aftermarket Parts installed:

- Aftermarket Parts installed
- Body Lift or Lowering Kit
- Custom Hood
- Intercooler or Turbo upgrades

CARB STATUS - PENDING

We have or are in the process of submitting the intake for a CARB EO Number. Once issued, this product will be legal for use in ALL US States including California.

BEFORE YOU START

- Please read the entire product guide before proceeding.
- Ensure all components listed on page 4 are present.
- If you are missing any of the components, call our customer support at (909) 947-0015.
- Do not work on your vehicle while engine is hot.
- Make sure the engine is turned off and the vehicle is in Park or the Parking Brake is set.

1. With the ignition switched off and the parking brake set, disconnect the negative battery cables on both batteries.



2. Disconnect the electrical harness connectors for the Intake Air Temp (IAT) and the Mass Air Flow (MAF) sensor then unsnap the wire loom from the tube. On the MAF sensor, slide the red locking tab up then press down on the tab and pull the connector out. For the IAT sensor, press down on the grey tab and pull the connector out.



3. Loosen the hose clamp at the turbo inlet, next pinch the spring clamp and slide it up the CCV line. Pull off the silicone hose and remove spring clamp.



4. Remove the mounting nut on the stock air box. Save the nut for the installation.




5. Lift up and out to remove the stock air box assembly from the vehicle.



6. Install the Tube Seal (**C**) onto the Air Box (**A**).



7. (OPTIONAL) For those concerned about minimal engine heat; install the Box Plug (**N**) onto the bottom of the Air Box (**A**) using the provided 1/4-20 Screws (**Q**), Lock Washers (**P**), Flat Washers (**O**) and Locknuts (**U**). For those seeking additional air flow, set the box plug aside.

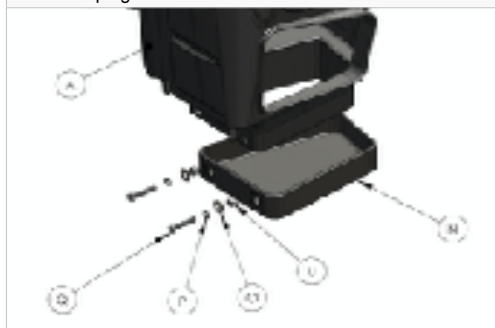

8. Carefully remove both MAF and IAT sensors from the stock air tube and use the supplied 8-32 Screws (**J**), MAF Gasket (**T**), IAT Gasket (**V**) to install them onto the Intake Tube (**B**). Do not over tighten.




SEE EXPLODED VIEW ON PAGE 4

INSTALLATION INSTRUCTIONS (CONTINUED)

9. Slide the Silicone Adapter (E) and two #64 Hose Clamps (G) onto the Intake Tube (B) and the Breather Hose (F) and two #12 Hose Clamps (H) onto the spout. Make sure not to push the coupler too far deep into the tube. The edge of the coupler should meet up to the back stop bead and the edge of tube should be about half way through the coupler. Tighten the hose clamps on the intake side. Leave the other ones loose for now.



10. Install the Intake Tube (B) onto the turbo and slide the Breather Hose (F) onto the CCV line. Do not tighten any hose clamps yet. Place the Air Filter (D) and Air Box (A) into the truck. Insert the other end of the air intake tube into the air box. You may have to lift the air box up a little bit to get the air intake tube through the Tube Seal (C). The stop bead on the intake tube should be sealed up to the tube seal. Slide the air filter onto the intake tube and tighten the #88 Hose Clamp (S). Align the box prongs on the bottom of the air box with the grommets on the side of battery tray and push down on the box to completely seat the prongs onto the grommet. Tighten the hose clamp at the turbo and CCV line.

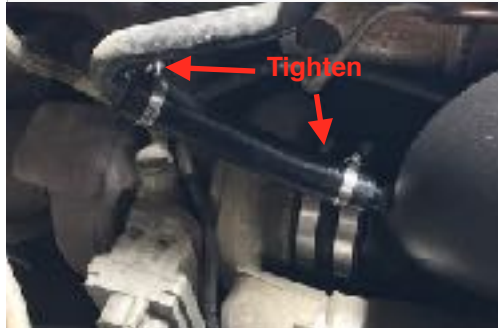

11. Secure the Air Box (A) using the stock mounting nut removed in Step #4.



12. Remove the protective covering on the Clear Lid (I) and the install the Edge Trim (S).



13. Place the Clear Lid (I) on top of the Air Box (A) using the supplied 10-24 Screws (L) and Washers (K).



14. Reconnect the electrical connector into the MAF and IAT sensor.



15. Reconnect the negative terminal on both batteries. Inspect your installation, make sure the kit is properly positioned and all fasteners are secure. Affix the CARB and ID label near the intake kit. The installation is now complete.



SEE EXPLODED VIEW ON PAGE 4

INSTALLATION INSTRUCTIONS (CONTINUED)

RELATED ITEMS FOR YOUR PURCHASE



Air Filter Wrap
SKU# WF-1023



Replacement Cotton Filter
SKU# KF-1035



Replacement Dry Filter
SKU# KF-1035D



Precision II: Cleaning & Oil Kit
SKU# 88-0008



Intake Scoop
SKU# AS-5049

Order online today at www.sbfilters.com or through your local S&B distributor.

AIR BOX END CAP TESTING

Stock air boxes are a significant contributor to poor air flow which is why S&B designs custom air boxes with secondary and/or enlarged openings. With that said, S&B recognizes the benefits of cooler air, so we have included a plug to seal off the opening if so desired. For optimal performance, we recommend that the intake be used without the end cap except in conditions of extreme heat.

PERFORMANCE TESTING

- Engage parking brake and start your engine. Listen for abnormal noises. If an air leak is detected, re-inspect hoses and connections as they may need to be repositioned and tightened.
- S&B FILTERS recommends that you keep your OE intake system in the event it is required in the future.
- In order to maintain your warranty, all connections and components must be checked periodically for alignment and for proper tension on all connections. Failure to do so may void your warranty.
- Use only S&B FILTERS cleaning and oil products to service your filter. Using any other brand oil and or cleaners on your S&B air filter may void your warranty.

WARNING!

If your vehicle has a Vehicle Emission Control Information decal affixed to the factory airbox, a new replacement label must be obtained and installed in a readily visible position in the engine compartment in order to remain CARB compliant. Failure to do so will prevent the vehicle from passing a smog check. Replacement labels can be ordered from your local dealership. Regulations state that the VECI label shall not be affixed to any equipment which is easily detached from the vehicle. Label placement, under the hood on a painted surface is recommended.



EMISSIONS STANDARD

The California Air Resource Board (CARB) requires that an E.O. identification label be applied to the vehicle in order to pass a smog check inspection when a Performance Intake Kit has been installed. You must place the E.O. label provided on or near the intake kit after installation so that a smog check technician can easily verify the E.O. number. As of April 2009, S&B has never had a product where CARB denied an exemption request; however, the exemption process with CARB can take as long as 18 months. Check the status of the exemption process by looking up a specific part number at www.sbfilters.com. The CARB Exemption number and/or status is listed under the Product Details section for each part number. If the status shows as "Pending," CARB has yet to issue an exemption. Products that have not been issued an EO number are street legal in most states, but may not be used on emission controlled vehicles in the state of California and are for off road use only. If you purchased your kit from S&B Filters directly, we will automatically mail you your Exemption Sticker when it is issued to us. If you purchased your kit from an authorized S&B Filters Dealer, log onto our web site and register to receive your Exemption Sticker.

SEE EXPLODED VIEW ON PAGE 4



EXPLODED VIEW



ITEM	QTY.	DESCRIPTION	P/N	ITEM	QTY.	DESCRIPTION	P/N
A	1	AIR BOX	AL1272-00	L	4	SCREW, TRUSS, 10-24 x 5/8"	AI1539-00
B	1	INTAKE TUBE	AL1270-00	M	1	SCREW, ALLEN, M8 x 1.25" x 40mm	AI1369-00
C	1	TUBE SEAL	AI1717C-00	N	1	BOX PLUG	AL1207-00
D	1	AIR FILTER	KF-1035	O	4	WASHER, FLAT, 1/4"	AI1073-00
E	1	SILICONE ADAPTER	AI1029C-00	P	2	WASHER, LOCK, 1"	AI1309-00
F	1	BREATHER HOSE	AI1040-05	Q	2	SCREW, HEX, 1/4-20 x 1 1/2"	AI1950-00
G	2	HOSE CLAMP, #64	AG1018-00	R	1	HOSE CLAMP, #80	AG1010-00
H	2	HOSE CLAMP, #12	AG1030-00	S	1	EDGE TRIM	AI1636-01
I	1	CLEAR LID	AI1613-00	T	1	MAF SENSOR GASKET	AI1301-00
J	3	SCREW, 8-32 x 1/2"	AI1479-00	U	2	LOCKNUT, 1/4-20	AI1074-00
K	4	WASHER, SEALING, #10	AI1540-00	V	1	IAT SENSOR GASKET	AI1302-00